

# F-100C Repair Guide

## How to replace the starter for ozone Bulb


**Symptoms:** If you are experiencing blinking of the ozone bulb and it does not completely turn on, you may have a faulty starter.

This guide explains how to replace the starter in the F-100C mini facial steamer by Silver Fox.

1. Remove the single screw in the back of the unit so you can easily access the screws on the underside of the top.



2. Once you have removed this screw you can easily separate the top from the bottom. Be careful not to stretch as there are wires running through. You just need enough room so you can turn the top upside down to gain access to the screws underneath. Remove these four screws shown below.

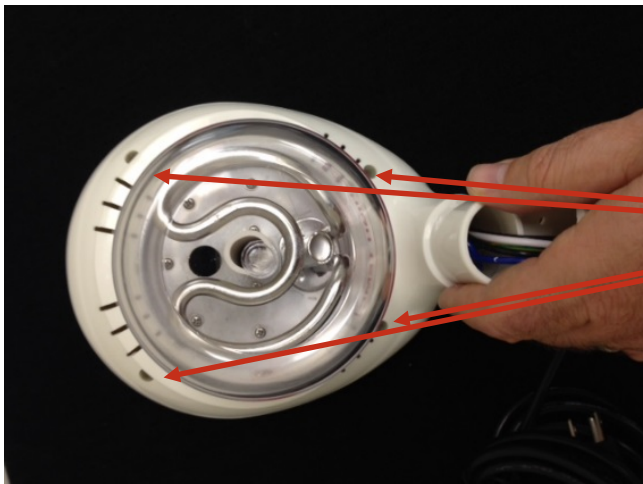

Remove these four screws.

3. Once you have removed the screws you can pop off the top cover.



4. The starter is the white cylinder shown below. Unplug and place the new starter in the unit. Screw all components back together. You must have water in the jar and the unit turned on before attempting to test.

